



INSTALLATION INSTRUCTIONS

Unitronic Coolant Reroute Hose for 1.8 / 2.0 TSI® Gen3 MQB® UH001-AC3

Unitronic recommends that you read through the entire installation instructions prior to beginning the installation to familiarize yourself with the included components, tools required, and procedures involved with the installation.

DISCLAIMER: Unitronic recommends that a Unitronic Authorized Dealer or other qualified and trained professional should perform the installation of this product.

Unitronic Installation Instructions are also available in digital format, if you prefer. Please visit the corresponding product page for a link to download the digital Installation Instructions. www.getunitronic.com

It is recommended to confirm all parts are present prior to beginning the installation.

PACKING LIST:

PART NUMBER	DESCRIPTION	QUANTITY INCLUDED
UH001-AC3	Unitronic Coolant Reroute Hose for 1.8/2.0TSI Gen3 MQB®	1
	Hose Clamp for Coolant Reroute Hose	2

RECOMMENDED TOOLS NEEDED:

- Hose clamp pliers (VAS 6362)
- Pliers



INSTALLATION INSTRUCTIONS

Unitronic Coolant Reroute Hose for 1.8 / 2.0 TSI® Gen3 MQB®
UH001-AC3

- 1** Unclip the coolant hose from the air duct. (See Fig. 1)
- 2** Using your hose clamp pliers, disconnect the coolant hose. (See Fig. 2) ****Might leak, prepare some absorbent. Engine must be cold in order to avoid losing too much coolant.****
- 3** Remove the check valve from the OEM coolant hose. You can use a plier and lubricant (as shown on the figure) or simply cut the hose, if you do not wish to keep it. (See Fig. 3) ****Be careful not to crush the check valve when using pliers.****
- 4** Insert the check valve in Unitronic's coolant hose as shown. **IMPORTANT:** Check valve must go in with the chamfer first, on the opposite side from the 180 degree bend. Check valve must be pushed all the way to the first bend in order to install the hose properly on the engine. ****If check valve is inserted the wrong way, it can cause major damages to the cooling system**** (See Fig. 4 and 5)
- 5** Using your hose clamp pliers, connect Unitronic's coolant hose. (See Fig. 6)

CONGRATULATIONS! You have successfully installed Unitronic's Coolant Reroute Hose!



FIG. 1



FIG. 2



FIG. 3

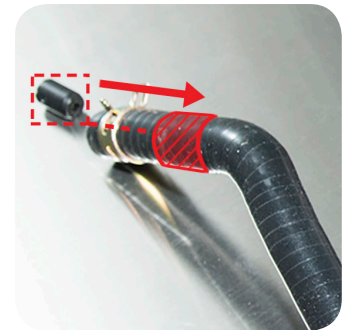


FIG. 4



FIG. 5



FIG. 6